


Mackie Tech Support - ProFX Series Install and Setup for Windows 7

This document will go through the setup and install of a ProFX series mixer including the ProFX-8, ProFX-12, ProFX-16 and the ProFX-22 to a Windows 7 PC.


1. Connect the ProFX mixer to your PC using a USB cable provided in the box. With the ProFX powered off.
2. With the PC completely booted up. While looking at the desktop power the the ProFX on.
Now you'll see a window pop up in the bottom right hand corner of your taskbar. Windows is now installing the class compliant driver. See below:

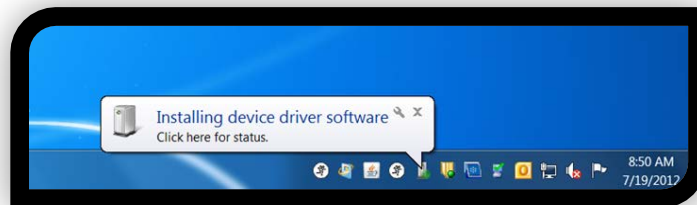


3. Once the driver is installed. You'll see: USB Audio CODEC Device Driver installed succesfully.



4. Now in the Control Panel>Hardware and Sound>Sound: You'll see Speakers 2-USB Audio CODEC make sure you see a green check mark and Default Device.

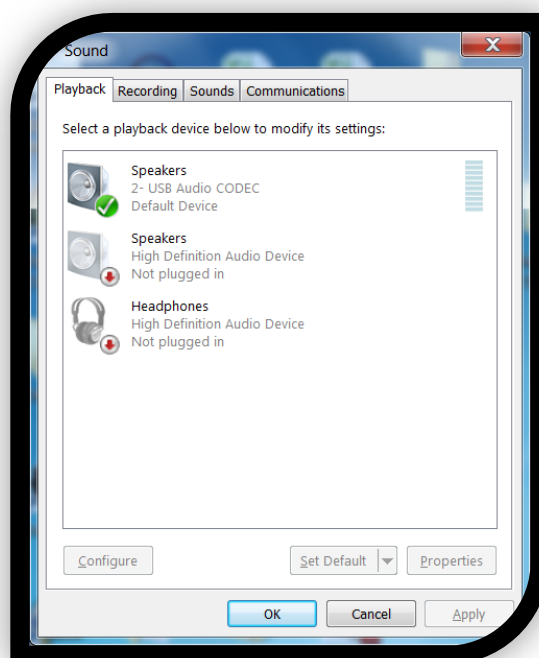

5. Click on the recording tap on the top and also verify Microphone 2-USB Audio CODEC make sure you see a green check mark and Default Device.

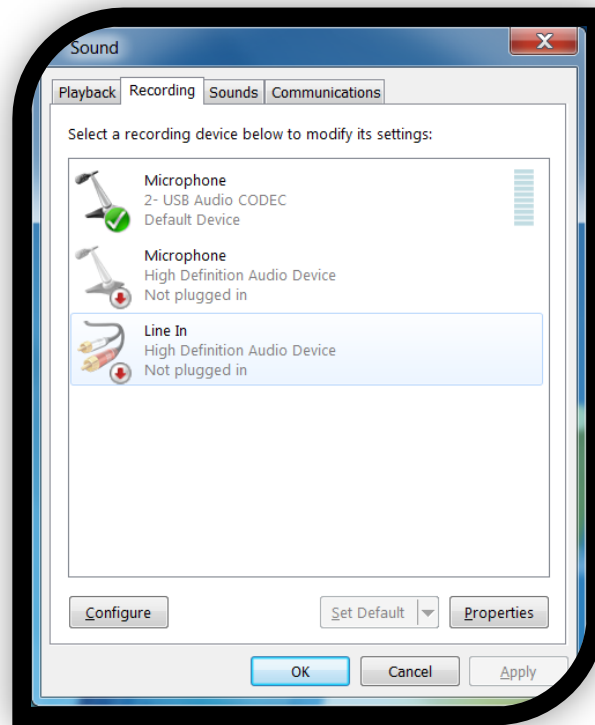

Congratulations the ProFX is now ready for your PC!

Contact Us

If you are still having a setup issue, please contact us via email or phone so we can trouble shoot your setup.

Email: techmail@loudtechinc.com

Phone: 800-258-6883 Ext. 1632

We are open Monday – Friday, 8AM-4PM PST

